


Powder Max

Large volume sleeve sampler

Designed for use with free flowing powders, granules and grains. The Powder Max enables large samples to be quickly and easily taken.

- Operation
1. Insert sampler into the product.
 2. This action forces the sleeve upwards covering the sample hole and stopping powder from entering.
 3. On pulling the sampler upwards, the sleeve moves down and the product can now enter the sampler.
 4. Invert sampler to discharge the sample.

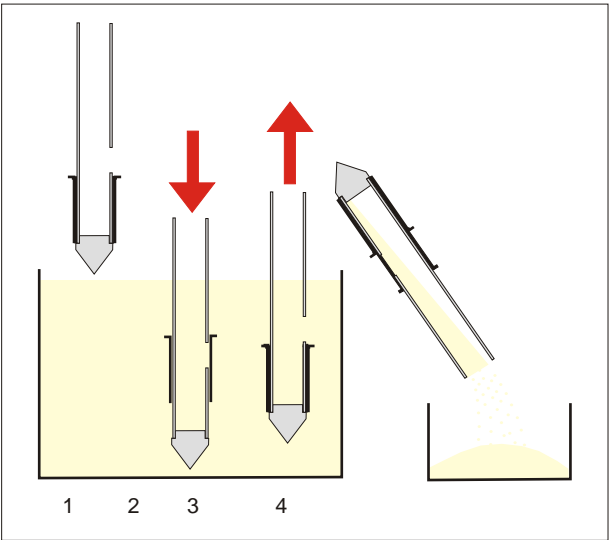

Part No.	Overall Length	Max. Sample Volume
1213A-01	1000mm	150ml
Ancillaries	Cleaning brushes	See page 78 for full range
	Storage Cases	See page 79 for full range
	Earthing lug	See page 75 for details