

Sleeve Sampler



Large Volume Sampling From Depth

Ideal for sampling large volumes at great depths. Various sized chambers can be attached to the same handle to allow different sample volumes to be taken.

- Type: Single Point
- Material: 316 stainless steel, bright finish
- Options: Special lengths and chamber sizes.
Extension handles
- Operation:
1. Select the correct chamber for the volume to be sampled and screw it onto the handle. Insert the sampler into the product.
 2. At the required depth pull up the sampler slightly. This will force the sleeve down so that product can fall into the sample chamber.
 3. Remove sampler.
 4. To empty sampler either pour sample out of filling port or unscrew the tip.



Heavy Duty Handle The heavy duty handle and extension rods have been designed to be extremely strong and robust to allow samples to be taken from great depths. We only recommend Heavy Duty handles with the Sleeve Sampler.

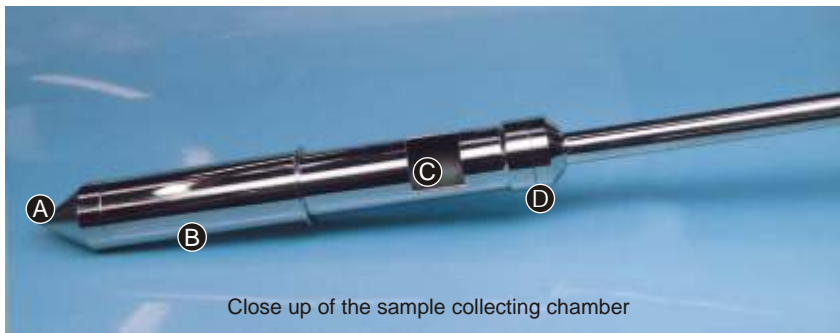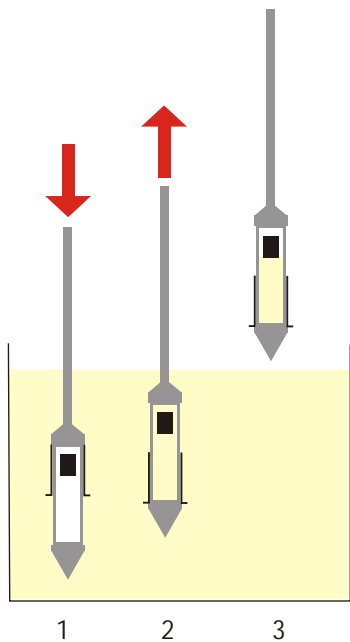

Close up of the sample collecting chamber

- (A) Tip (screws into chamber)
- (B) Sleeve
- (C) Entrance port for powder
- (D) Chamber screwed to handle to allow different volumes to be attached



Handles & Extension Rods			Sample Chambers	
Part No.	Description	Length	Part No.	Chamber Volume
1035A-1000	Heavy Duty Handle	1000mm	1035T-100	100ml
1035A-1500	Heavy Duty Handle	1500mm	1035T-150	150ml
1035E-1000	Heavy Duty Extension Rod	1000mm	1035T-200	200ml
Storage Cases			Please download Range Brochure for further information	